

# Remsafe Mini Push Lock



- ✓ Suitable for awning, casement, sliding and double hung timber windows
- ✓ Easy DIY installation
- ✓ For increased window security

## The Remsafe Mini Push Lock is supplied with:

1 x Mini Push Lock body	2 x timber gauge fixing screws
1 x key	2 x self-drilling fixing screws for aluminium frames
1 x ferrule	2 x fixing screws for ferrule

## Installation:

1. Choose your desired installation position according to your window type.
2. Position the lock body against the window, ensuring 5 mm clearance between the lock body and fixed window frame to allow for the ferrule. In this position, mark the fixing holes with a pencil.
3. Drill 2 mm pilot holes for the fixing screws.
4. Attach the lock body to the frame using either the timber gauge or self-drilling screws provided. Self-drilling screws are to be used on aluminium frames only.
5. With the window closed, align the bolt with the ferrule position on the fixed window frame. Drill the hole for the bolt using an 11 mm drill bit.
6. With the ferrule in the correct position, mark the ferrule screw holes and secure with fixing screws provided.
7. Test the lock for correct positioning.
8. Check the operation of the lock to ensure the bolt engages and does not interfere with the opening or closing of the window.

## Maintenance:

The manufacturer recommends maintenance is carried out on Remsafe products by a licensed tradesman every twelve (12) months. In addition, it is recommended that regular checks (every three to six months) are carried out by the user of each window safety device at the time of operation. Repeated force on a Remsafe Window Locks safety device may lead to general wear and tear and cause screws to become loose.

Consideration must be given to the local environment and maintenance carried out accordingly.

1. All screws must be checked to ensure they have not loosened. Loose screws must be tightened.
2. All lock components must be checked for any signs of corrosion, cracking, or loss of function. Any locks showing signs of corrosion, cracking, or loss of function must be replaced immediately.
3. All components must be checked to ensure against excessive movement. Any lock showing excessive movement must be replaced immediately.
4. If a window is able to be opened greater than 100 mm at any point a licensed tradesperson should be consulted for advice on the most appropriate window restrictor device for each window.

Warning: Window falls may result in injury or death. Falls from heights may still occur through windows with safety devices installed. To prevent falls from heights, climbable elements should be removed from below windows and children should be supervised around open windows.

**NEVER LEAVE THE KEY UNATTENDED IN ANY REMSAFE WINDOW LOCKS PRODUCT.**

**Remsafe Window Locks offer safety solutions for all window types.**

**Contact us for orders and enquiries on +61 2 9453 5625, email [info@remsafewindowlocks.com.au](mailto:info@remsafewindowlocks.com.au)  
or visit [www.remsafelock.com.au](http://www.remsafelock.com.au)**